


1 CUT CONE TO EXACT CORRESPONDING PIPE DIAMETER.




WHEN SLIDING FLASHING DOWN PIPE, LUBRICATE PIPE WITH WATER.

2 FORM TO ROOF PROFILE

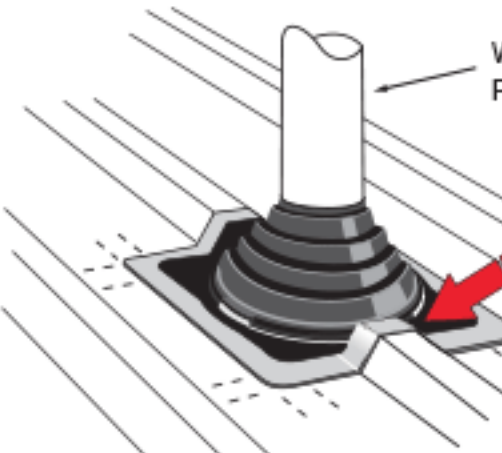


3 MARK OUT SILICONE PATHS

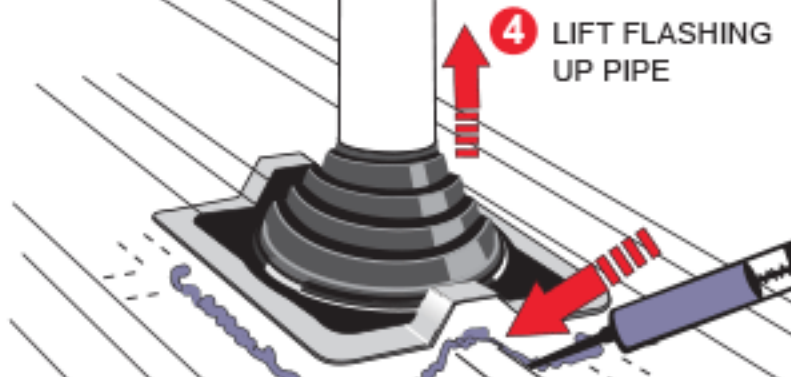

4 LIFT FLASHING UP PIPE

5 APPLY SEALANT ON MARKED PATH

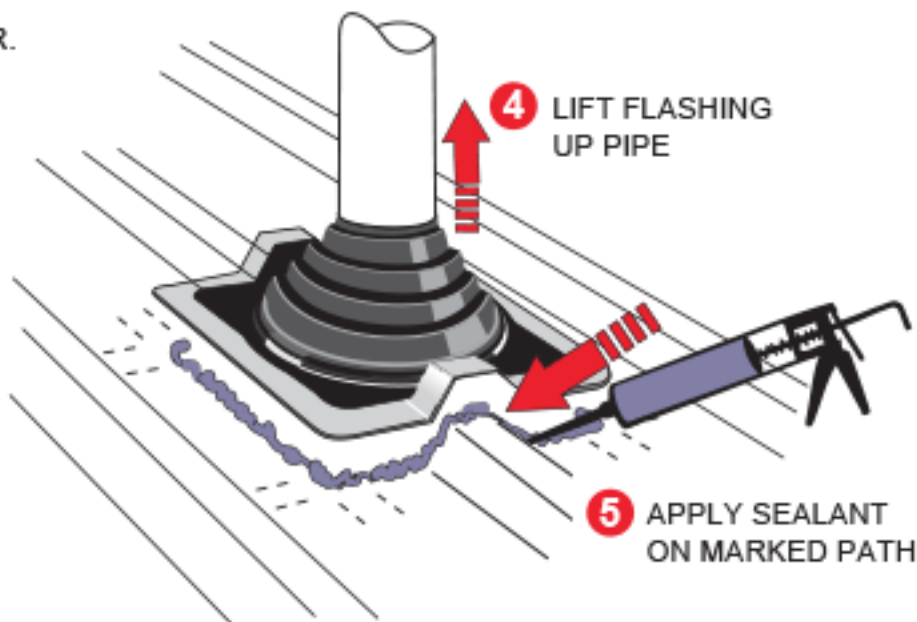

6 REALIGN FLASHING ONTO ROOF AND FIX WITH APPROPRIATE FASTENERS. START HERE.

